

# SHARP

## SJ-D190M

## SJ-DL55AS

 


Refrigerant; R600a  
Insulation blowing gas; Cyclopentane


製冷劑: R600a  
絕熱發泡氣體: 環戊烷

### REFRIGERATOR OPERATION MANUAL

原裝進口電冰箱  
使用說明書

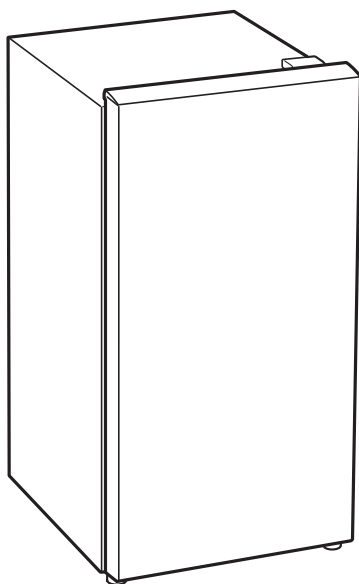

SJ-D190M

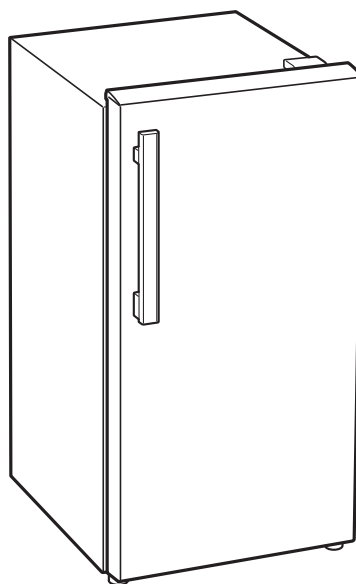 

SJ-DL55AS

### CONTENTS

• WARNING .....	2
• CAUTION .....	3
• INSTALLATION .....	3
• DESCRIPTION .....	4
• OPERATION .....	5
• STORING FOOD .....	6
• CARE AND CLEANING .....	6
• BEFORE YOU CALL FOR SERVICE .....	7

### 目錄




• 警告 .....	8
• 安全注意事項 .....	9
• 安裝 .....	9
• 各部位名稱 .....	10
• 使用方法 .....	11
• 食品的儲存 .....	12
• 保養 .....	12
• 送修之前的初步檢查 .....	13

Thank you very much for buying this SHARP product. Before using your SHARP refrigerator, please read this operation manual to ensure that you gain the maximum benefit from it.

- This refrigerator is intended for making ice cubes, refrigerating and freezing foods.
- This refrigerator is for household use only, with ambient temperature indicated in the table. The climate class is specified on the rating plate. The refrigerator is fully functional at the ambient temperature range of the indicated climate class. If the refrigerator is used at colder temperatures, the refrigerator will not be damaged up to a temperature of +5°C.
- The refrigerator should not be subjected to temperatures of -10°C or below for a long period of time.

Household use only	
Climate class	Acceptable range of ambient temperature
S	+10°C to 32°C
N	+16°C to 32°C
ST	+16°C to 38°C
T	+16°C to 43°C

## Safety information

	<b>Warning</b>	This means that there are high risks of death or serious injury.
	<b>Caution</b>	This means that there are high risks of material damage or personal injury.
	<b>Caution</b>	Fire marks means this refrigerator has risk of fire accident.

### **Warning**

#### Refrigerant

This refrigerator contains flammable refrigerant (R600a: isobutane) and insulation blowing gas (cyclopentane). Observe the following rules to prevent ignition and explosion.

- Do not allow any sharp objects to have contact with the refrigeration system. The refrigeration system behind and inside the refrigerator contains refrigerant.
- Do not use mechanical devices or other means to accelerate the defrosting process.
- Do not use electrical appliances inside the refrigerator.
- Do not block the space around the refrigerator.
- Do not use flammable sprays, such as spray paint near the refrigerator.
- In the case of failure of the refrigeration system, do not touch the wall socket and use open flames. Open the window and let out the air from the room. Then ask a service agent approved by SHARP for service.

#### Power cord, Plug, Socket

Read carefully the following rules to prevent electric shock or fire.

- Make sure to protect the power cord from being damaged during installation or moving. If the power plug or cord is loose, do not insert the power plug.
- Do not place multiple portable socket-outlets or portable power supplies at the rear of the refrigerator.
- Connect the power plug into the wall socket firmly and directly. Do not use an extension cord or adapter plug.
- Connect the power plug to the socket with the required rated voltage.
- Connect the earth pin to the earth terminal properly.
- Do not touch the power plug with wet hands.
- Disconnect from the main electricity supply by removing the main plug from the socket. Do not remove by pulling the power cord.
- Dust deposited on the power plug may cause fire. Wipe it off carefully.

- Pull out the plug if the refrigerator is not used for a long time.
- If the flexible supply cord be damaged, it must be replaced by service agent approved by SHARP in order to avoid a hazard.

#### Installation

- Do not install the refrigerator in a damp or wet location. It may cause damage to the insulation or electrical leak. Dew may also appear on the outer cabinet and it causes rust.
- The refrigerator should be installed flatly and firmly on the floor.

#### In use

- Do not store volatile and flammable materials such as ether, petrol, propane gas, aerosol cans, adhesive agents and pure alcohol etc. These materials are easy to explode.
- Do not store temperature-sensitive products such as pharmaceutical products in the refrigerator. There are high risks of changes in product quality.
- Do not attempt to change or modify this refrigerator. This may result in fire, electric shock or injury.
- Do not place any object on the top of refrigerator. If the object falls down from the top, it may cause injury.
- Do not use other than potable water to make ice cubes.
- This appliance can be used by children aged from 8 years or above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way or understanding the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.

## Care and Cleaning

- Unplug the refrigerator first to prevent electric shock.
- Do not splash water directly on the outer cabinet or the interior. This may lead to rusting and deterioration of the electrical insulation.

## Trouble

- If you smell something burning, pull out the power plug immediately. Then ask a service agent approved by SHARP for service.
- In case of gas leak, ventilate the area by opening window. Do not touch the refrigerator or the power socket.

## Disposal

 
- Ensure that the refrigerator presents no danger to children while being stored for disposal. (e.g. remove the magnetic door seals to prevent child entrapment.)
- This refrigerator should be disposed appropriately. Take the refrigerator to a professional recycling plant for flammable refrigerant and insulation blowing gases.



## Caution

### Transportation

- When you install or move your refrigerator, use curing mat to protect the floor from being damaged.
- Carry the refrigerator securely. If you lift up the refrigerator improperly, it may cause injury.

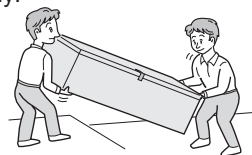


### In use

- Do not touch the compressor unit or its peripheral parts, as they become extremely hot during operation and the metal edges may cause injury.
- Do not touch foods or metal containers in the freezer compartment with wet hands. This may cause frostbite.
- Do not place bottled drinks and cans in the freezer compartment.
- Do not open or close the door when somebody put a hand near the door. There is a risk that the other person may get their fingers in the door.
- Do not put oversized object in the pockets of the door. If the object falls down from the pockets, it may cause injury.

# Installation


Free standing type

 - 1 Keep adequate ventilation space around the refrigerator. The picture shows the minimum required space for installing the refrigerator. The measurement condition of energy consumption is conducted under a different space dimension.

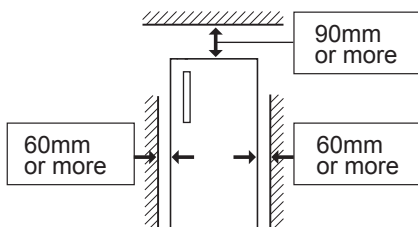


### Rear clearance

 The space between the rear of the refrigerator and the wall should be 50mm or more, and less than 75mm. If the space is wider than 75mm, you may get injured by touching compressor and its peripheral parts which are extremely hot during the operation.

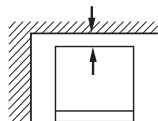


### Overall space required in use

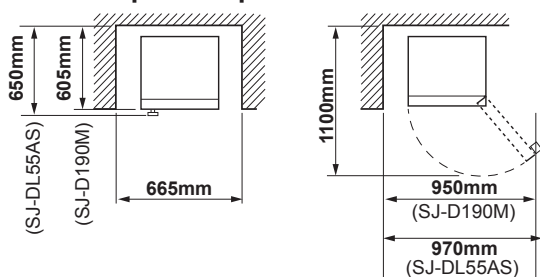 

### NOTE

- By keeping greater space, the refrigerator may consume a less amount of power consumption.
- If use the refrigerator in the smaller space dimension than figured, it may cause temperature rise in the unit, loud noise and failure.
- Do not push the refrigerator against the wall. The wall surrounding the refrigerator may get dirty or discolored because of the air flow caused by heat radiation.

 - 2 Use the adjustable foot to place the refrigerator flatly and firmly on the floor.

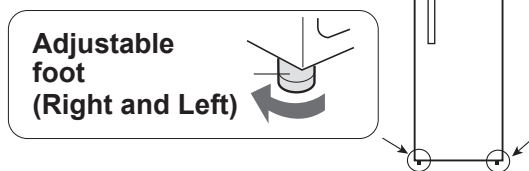


### NOTE

- Place your refrigerator to access the plug.
- Keep your refrigerator out of direct sunlight and do not place next to heat generating appliance.
- Do not place your refrigerator directly on the ground. Insert suitable stand such as wooden board under the refrigerator.

### Before using your refrigerator

Clean the inside parts with a cloth soaked in warm water. If soapy water is used, wipe it off thoroughly with water.
 
# Description

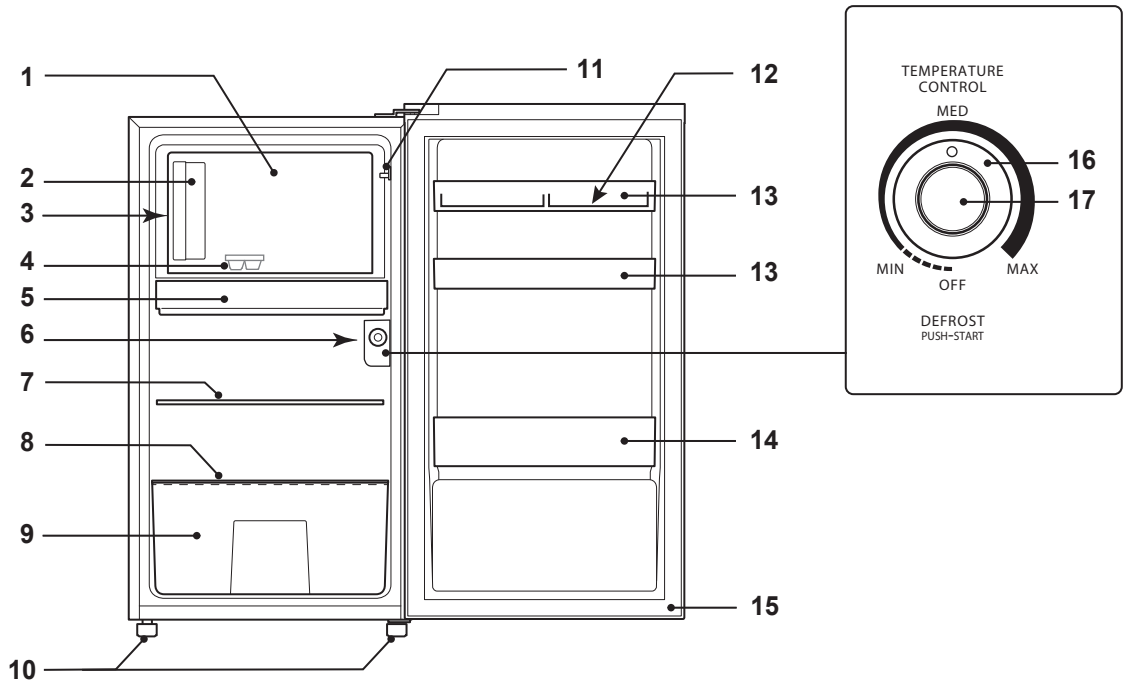


- 1. Freezer compartment
- 2. Freezer door
- 3. Defrost indicator
- 4. Ice cube tray
- 5. Soft freezing case
- 6. LED Light
- 7. Refrigerator shelf
- 8. Vegetable shelf
- 9. Vegetable case

- 10. Adjustable foot
- 11. Door switch
- 12. Egg holder
- 13. Door pocket
- 14. Bottle pocket
- 15. Magnetic door seal
- 16. Temp. control knob
- 17. Defrost button


## How to make the ice

 1. Pour the water into the ice cube tray.
2. When the ice is made, twist the ice cube tray to take out the ice.

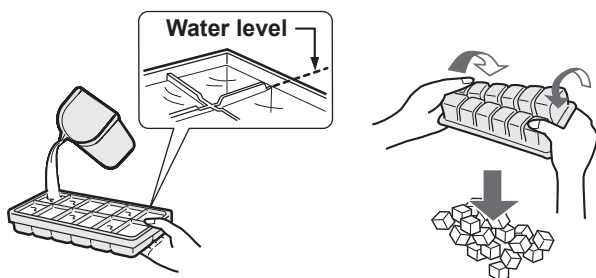

## Vegetable shelf

 
Do not put any food on the dotted area. Otherwise the bottle pocket hits the food, and the door does not close properly.

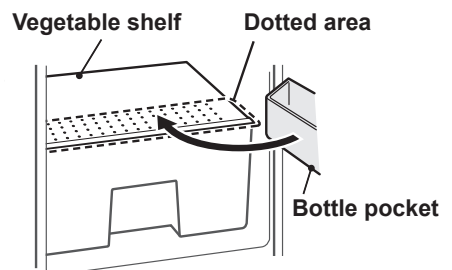

# Operation

## Controlling temperatures

 The refrigerator controls its temperature automatically. However, you can adjust the temperature as follows if needed.

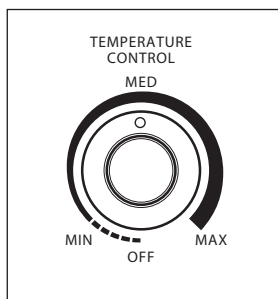

KNOB SETTING	PURPOSE
<b>OFF</b>	Cooling operation stops.
<b>MIN</b>	<ul style="list-style-type: none"> <li>• For storing a small amount of food</li> <li>• When the door is not opened frequently.</li> <li>• For cold season when the ambient temperature is comparatively low.</li> </ul>
<b>MED</b>	For normal use.
<b>MAX</b>	<ul style="list-style-type: none"> <li>• For extreme cooling and storing large amount of food.</li> </ul> <p><b>NOTE:</b> When extreme cooling is not required, make sure to return the knob to the original position. Otherwise all food may be frozen.</p>


### NOTE:

 - The knob should not be beyond "MAX" position.
- When the knob is set at the "MIN" dew drops may be formed.
- If the refrigerator is operated for a long time with TEMPERATURE CONTROL is set at "MAX", foods stored in the refrigerator compartment may also freeze.

## Defrosting


The freezer compartment is required defrosting operation when the thickness of the frost becomes 5mm (over the defrost indicator).

The water is discharged into the soft freezing case.

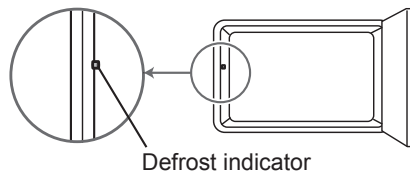

## Procedure

 1. Take out the ice cube tray and foods stored in the freezer compartment and soft freezing case.
2. Press the defrost button.

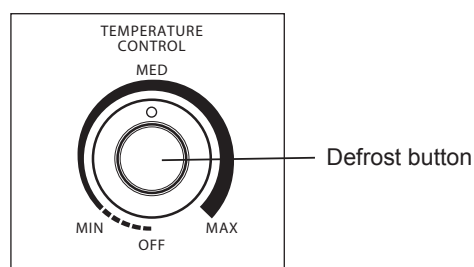


3. When the defrosting is finished, make sure to throw away the water from the soft freezing case. (Otherwise the defrosted water in the soft freezing case will be frozen.)

- Cooling operation starts automatically after defrosting.
- To cancel the defrosting mode, turn the temperature control knob to "OFF". After that, set the temperature control knob as you choose.

## How to remove the soft freezing case

 1. Slide the soft freezing case out to the end.
2. Lift the soft freezing case up slightly.
3. Remove the soft freezing case.

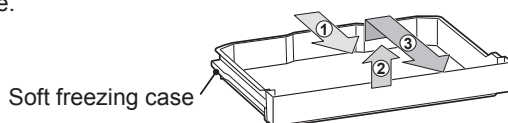

### NOTE:

- Do not attempt to remove the frost in the freezer compartment forcibly. Do not use a knife or a sharp metal to remove the frost.
  - If the thickness of the frost is over the defrost indicator, make sure not to spill the defrosted water from the soft freezing case.
  - Make sure not to defrost when frozen food is stored in the freezer compartment. Otherwise the foods may be melted.
- Take out the food from the freezer compartment and soft freezing case before defrosting.

# Storing food

Refrigeration reduces the rate of food spoilage. Ensure that the food is of the freshest possible quality to maximize the shelf life of perishable foods. The following is a general guide to help promote longer food storage.

## Fruit / Vegetables

Fruit and vegetables should be loosely enclosed in a plastic material e.g. wrap, bags (do not seal) and placed in the vegetable case to minimize moisture loss.

## Dairy Products & Eggs

- Most dairy products have their best-before date on the outer packaging which informs the recommended temperature and shelf life of the foods.
- Eggs should be stored in the Egg holder.

## Meats / Fish / Poultry

- Place on a plate or a dish and cover with paper or plastic wrap.
- For larger cuts of meat, fish, or poultry, place to the rear of the shelves.
- Ensure all cooked food is wrapped securely or placed in an airtight container.

## Soft freezing case

This is suitable for storing food without freezing solid. You may cut food easily.

If the food is hard to cut, leave it for five to fifteen minutes on a cooking board then try again.

Please note that this case is not designed for long-term storage of frozen food. Stored food should be used within 1 week.

## For best freezing in the freezer compartment

- Quality of foods should be fresh.
- Freeze small quantities of food at a time in order to freeze them quickly.
- Food should be properly sealed or covered tightly.
- Place foods in the freezer evenly.
- Label bags or containers to keep an inventory of freezing food.

## Advice for preventing dew or frost inside the refrigerator

- Keep the door securely closed. If the food falls down, it may cause a gap between the cabinet and the door. Move it back to the shelf or the pocket.
- Food with high-moisture should be stored in airtight container or sealed tightly.

## NOTE

- Keep the door securely closed.

# Care and cleaning

## Important

**To prevent cracks on inside surfaces and plastic components, follow these tips.**

- Wipe out food oil adhered to plastic parts.
- Some household chemicals may cause damage, so use only diluted washing-up liquid (soapy water).
- If undiluted detergent is used or soapy water is not wiped off thoroughly, it may result in cracks of plastic parts.

## Cleaning

- Remove the accessories (e.g. shelves) from the cabinet and the door. Wash them by warm soapy dishwashing water. After that, rinse them in clean water and dry.
- Clean the inside with a cloth soaked in warm soapy dishwashing water. Then, use cold water to wipe off soapy water thoroughly.
- Wipe the exterior with a soft cloth each time it gets dirty.
- Clean the Magnetic door seal with a toothbrush and warm soapy dishwashing water.

## NOTE

- Do not use heavy-duty cleansers or solvents (lacquer, paint, polishing powder, benzene, boiled water, etc.) which may cause damages.
- If you pull out the power plug once, wait 5 minutes at least before connecting the power plug again.
- Do not drop objects inside the refrigerator or strike the inner wall. This may cause cracks to inner surface.

## When the compartment light is blown

Contact the service agent approved by SHARP to replace the light. The light is not to be replaced other than by qualified service personnel.

## Switching off your refrigerator

If the refrigerator needs to be switched off for an extended period, the following steps should be taken to reduce the growth of mold:

1. Remove all food, and execute the defrosting operation.
2. Remove the power plug from the socket.
3. Clean and dry the interior thoroughly.
4. Keep the door open slightly for a few days to dry.

# Before you call for service

Before calling for service, check the following points.

<b>Problem</b>	<b>Solution</b>
The outside of the cabinet is hot when touching.	It is normal. The hot pipe is in the cabinet in order to prevent dew generation.
When there is refrigerator noise.	It is normal for the refrigerator to make the following sounds. <ul style="list-style-type: none"><li>• Loud noise is made by the compressor when its operation starts<ul style="list-style-type: none"><li>-- Sound becomes quieter after a while.</li></ul></li><li>• Sound of flowing fluid (gurgling sound, fizzing sound)<ul style="list-style-type: none"><li>-- Sound of refrigerant flowing in pipes (sound may become louder from time to time).</li></ul></li><li>• Cracking or crunching sound, squeaking sound<ul style="list-style-type: none"><li>-- Sound produced by expansion and contraction of inner walls and internal parts during cooling.</li></ul></li></ul>
Frost or dew appears inside or outside the refrigerator.	This may occur in one of the following cases. Use a wet cloth for wiping frost and a dry cloth for wiping dew. <ul style="list-style-type: none"><li>• When the ambient humidity is high.</li><li>• When the door is frequently opened and closed.</li><li>• When foods containing plenty of moisture are stored. (Wrapping is required.)</li></ul>
The foods in the refrigerator compartment freeze.	<ul style="list-style-type: none"><li>• Is the refrigerator operated for a long time with the temp. control knob set MAX?<ul style="list-style-type: none"><li>-- Change the temperature control to the other setting.</li></ul></li><li>• If ambient temperature is low, foods may freeze even if the temp. control knob is set MIN.</li></ul>
Odors in the compartment.	<ul style="list-style-type: none"><li>• Wrapping is required for the foods with strong odors.</li></ul>

If you still require service

Refer to your nearest service agent approved by SHARP.




感謝您購買SHARP 產品。在使用SHARP 電冰箱之前，為使您能夠充份使用您所購買的冰箱，請仔細閱讀本使用說明書。

- 本冰箱可用於製作冰塊、冷藏和冷凍食物。
- 這個冰箱僅限於家庭用途，使用冰箱的環境溫度已在表格中寫明。氣候類型已在標牌上詳細說明。冰箱在指定氣候等級的環境溫度範圍內擁有齊全功能。如在較冷的環境溫度下使用本冰箱，則環境溫度需達到+5°C 才能保證不損壞冰箱。
- 冰箱在一段長時間內不應受到-10°C或以下的溫度。

僅限於家庭用途

氣候類型	可接受的環境溫度範圍
S	+10° C ~ 32° C
N	+16° C ~ 32° C
ST	+16° C ~ 38° C
T	+16° C ~ 43° C

## 安全注意事項

 <b>警告</b>	這表明導致死亡或重傷的風險很高。
 <b>安全注意事項</b>	這表明導致材料受損或人員受傷的風險很高。
 <b>安全注意事項</b>	火災標誌表示該冰箱存在火災事故的風險。

### 警告

#### 冷媒種類

冰箱含有易燃製冷劑（R600a：異丁烷）和絕熱發泡氣體（環戊烷）。

為防止著火和爆炸，請遵守以下規則。

- 請勿讓任何尖狀物體接觸製冷系統。冰箱內部及後側的製冷系統內含有製冷劑。
  - 請勿使用機械設備或其他方式來加速除霜過程。
  - 請勿在冰箱內使用電器。
  - 請勿堵塞冰箱周圍的空間。
  - 請勿在冰箱附近使用易燃性噴霧劑，例如噴漆，否則可能會導致爆炸或火災。
  - 如果冰箱的冷卻系統出現故障，請勿接觸牆壁電源插座，也勿使用明火。
- 開啟窗戶，保持空氣流通。然後聯繫SHARP認可的售後服務中心進行維修。

#### 電源線，插頭，插座

為防止觸電或火災，請仔細閱讀以下規則。

- 確保在安裝或移動過程中保護電源纜線不受損壞。如果電源插頭或電源線出現鬆動等情況，請勿插入電源插頭。
- 請勿在冰箱後部放置多個移動式插座或移動式電源供應器。
- 直接將電源插頭牢牢地插入牆壁電源插座。請勿使用延長的電線或轉換插頭。
- 將電源插頭插入符合額定電壓要求的插座上。
- 正確地將接地棒連接到接地端子。
- 請勿用濕手接觸電源插頭。
- 拔出電源插頭時，請不要只拉住電源線，應該拿住插頭端拔出。
- 電源插頭上積滿灰塵是引起火災的原因。因此，請時常將其擦淨。

- 冰箱如果長時間不使用，請將插頭拔出。
- 如耐扭電源線損毀，為避免出現危險，須立即由獲SHARP 許可的服務代理更換。

#### 安裝

- 請勿將冰箱設置在濕氣多及濺得到水的地方。這樣會因絕緣失效而導致漏電。而且有時會在冰箱外側結露。
- 將冰箱穩妥地安裝在地板的水平位置上。

#### 使用中

- 請勿儲藏揮發性物質和易燃性物質，如乙醚、汽油、丙烷氧、粘合劑、純乙醇等。此類物質有爆炸之危險。
- 請勿在冰箱內儲存溫度敏感型產品，例如醫藥產品。否則產品極可能會變質。
- 請勿改裝冰箱。修理技術人員以外的人員拆卸和修理本機，會導致火災、觸電和受傷。
- 請勿在冰箱頂部放置任何物品。如果物品從冰箱頂部掉落，可能會導致人員受傷。
- 請勿用飲用水以外的水製作冰塊。
- 此冰箱適合 8 歲及以上的兒童使用。在有符合電器使用安全的監督或指導及了解潛在危險的前提下，此冰箱也適合身體、感官或智力方面有缺陷的殘障人士、或者缺乏相關經驗或知識的人士使用。禁止讓兒童玩耍冰箱。在無任何監督的情況下，兒童不得對冰箱進行清潔及維修保養。



## 保養

- 為了防止觸電，首先拔掉冰箱的電源插頭。
- 請勿直接將水灑在冰箱的內部和外部。這樣會導致生鏽及絕緣性能下降。

## 故障

- 如果您聞到有東西燒焦了，則立即拔出電源插頭。然後聯繫SHARP認可的售後服務中心進行維修。
- 萬一發生瓦斯氣漏事故，請勿用手去觸摸冰箱和插頭，要打開窗戶通風。

## 廢舊冰箱的處理

 
- 確保冰箱在存放時不會對兒童造成危險，直致丟棄為止。（例如，卸下磁門封條，防止兒童陷入困境。）
- 請妥善處理冰箱。冰箱請運送至專業的可燃性製冷劑及絕熱發泡氣體廢料處理廠。



## 安全注意事項

### 運輸

- 安裝或移動冰箱時，請使用防護墊以防止地板受損。
- 穩固搬運冰箱。  
如果抬起冰箱的方式不當，可能會導致人員受傷。

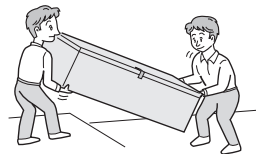


### 使用中

- 由於壓縮機單元或者其外圍部件在操作過程中將變得非常燙手，千萬不要去觸摸，否則，將會被金屬邊緣燙傷。
- 不要用濕手去觸摸冷凍室內的食品和金屬製容器。恐會導致手凍傷。
- 請勿將瓶裝或罐裝飲料放入冷凍室。
- 在有人將手放在冰箱門附近時，請勿開關門。存在其他人可能會被冰箱門夾住手指的風險。
- 請勿在冰箱門的冰箱盒上放置尺寸過大的物品。如果該物品從冰箱盒上掉落，可能會導致人員受傷。

# 安裝


獨立型

 - 1 冰箱的周圍應確保足夠的通風空間。此圖顯示了安裝冰箱所需的最小空間。在不同的空間尺寸下進行能源消耗測量條件。

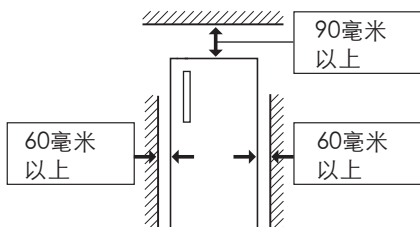


### 背後間隙

 冰箱後部與牆體之間的空间距離應為大於50毫米且小於75毫米。若此空間大於75毫米，切勿觸摸在運行中過熱的壓縮機以及外圍部件，以免受傷。

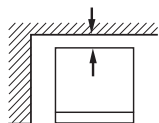

### 使用時所需總體空間

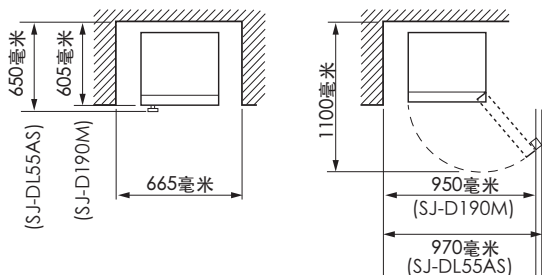 

### 請注意

- 冰箱周圍的空間越大，冰箱運行時的耗電量越小。
- 如果在小於圖所列示的空間尺寸中使用冰箱，可能會導致裝置溫度升高、噪音大及故障。
- 不要將冰箱推靠在牆壁。由於熱輻射引起的氣流，冰箱周圍的牆壁可能變髒或變色。

- 2 請利用調整腳，將冰箱穩妥地安裝在地板的水平位置上。



 
 
### 請注意

- 設置冰箱時要充分考慮便於插拔插銷。
- 請勿將冰箱放在陽光直射的地方或發熱機器的旁邊。
- 請勿將冰箱直接放在地面上。請在冰箱下面準備適當的台座，如木板。

### 在使用冰箱前

用溫水浸泡過的軟布清潔冰箱內部。如果使用肥皂液，請用水徹底擦掉殘留肥皂液。


# 各部位名稱

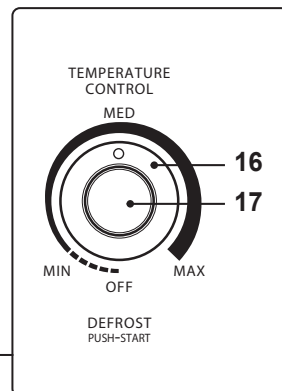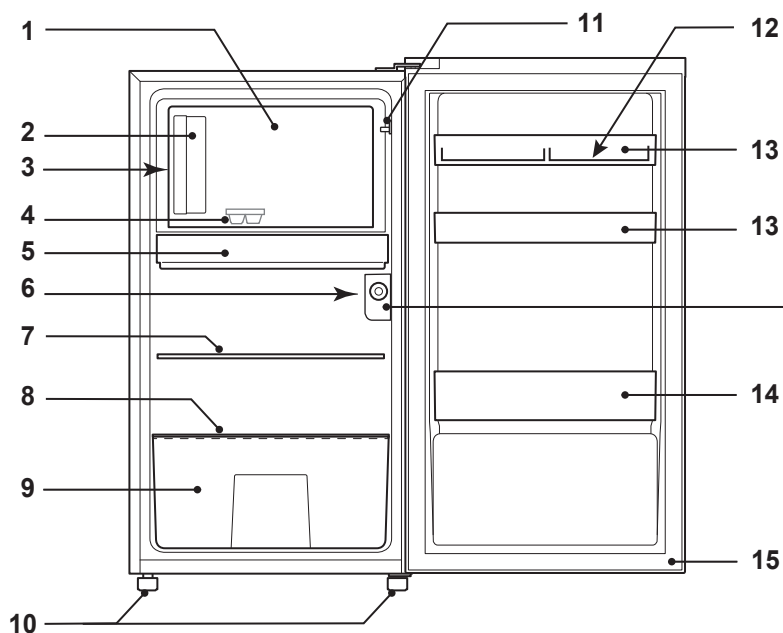

- |          |            |
|----------|------------|
| 1. 冷凍室   | 10. 調整腳    |
| 2. 冷凍室門  | 11. 門開關    |
| 3. 除霜指示器 | 12. 蛋架     |
| 4. 製冰匣   | 13. 門盒     |
| 5. 軟冷凍盒  | 14. 瓶盒     |
| 6. LED 燈 | 15. 磁門封條   |
| 7. 冷藏室盤架 | 16. 溫度控制旋鈕 |
| 8. 蔬菜盤架  | 17. 除霜按鈕   |
| 9. 蔬菜保鮮室 |            |


## 製冰方法

 1. 將水倒入製冰匣。
2. 冰塊凝結後，扭動製冰匣取出冰塊。

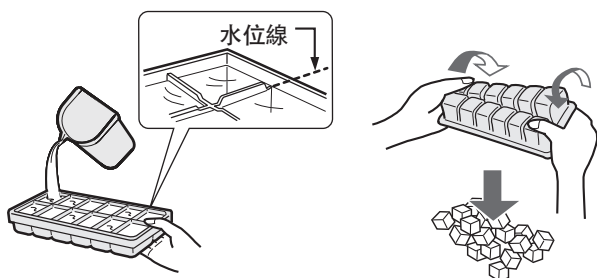

## 蔬菜盤架

 
請勿在虛線區域放置任何食物。  
否則瓶盒會撞到食物，令冰箱門無法正確關閉。

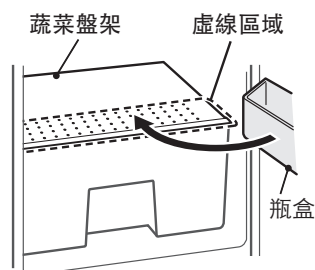

# 使用方法

## 冷藏室的溫度調節

 本冰箱會自動調節溫度。如有需要，亦可按如下方法調節溫度。

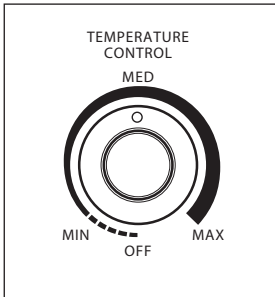


旋鈕設定	用途
OFF	製冷操作停止。
MIN	<ul style="list-style-type: none"><li>存放少量食物時用</li><li>冰箱門並不頻密開啟時。</li><li>寒冷天氣下環境溫度相對較低時。</li></ul>
MED	正常使用。
MAX	<ul style="list-style-type: none"><li>強力製冷及存放大量食物時用。</li></ul> <p>請注意： 當不需要強力製冷時，務必將旋鈕轉回原來的位置。 否則會令所有食物冷凍。</p>

### 請注意：

 - 旋鈕不應該超出“MAX”位置。
- 旋鈕設置在“MIN”時，可能會形成露滴。
- 如果冰箱在 TEMPERATURE CONTROL 設置在“MAX”時長時間運行，則冷藏室內存放的食物也可能凍結。


## 除霜

當結霜的厚度達 5 毫米時（超過除霜指示器），須對冷凍室執行除霜操作。  
水會被倒入軟冷凍盒。

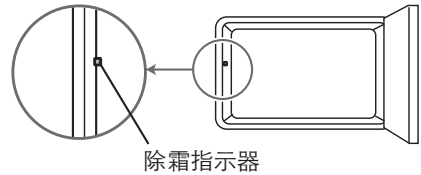

### 步驟

 
1. 取出製冰匣以及存放在冷凍室與軟冷凍盒的食物。
2. 按下除霜按鈕。

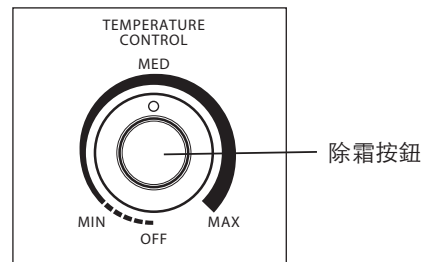

3. 除霜結束後，務必將軟冷凍盒的水倒清。  
否則軟冷凍盒內已除霜得水會結冰。
- 製冷操作會在除霜後自動開始。
- 要取消除霜模式，將溫度控制旋鈕轉動至「OFF（關閉）」。之後轉動溫度控制旋鈕設定您想要的溫度。

## 拆卸軟冷凍盒的方法

 1. 將軟冷凍盒滑動至尾端。
2. 輕力抬起軟冷凍盒。
3. 拆卸軟冷凍盒。

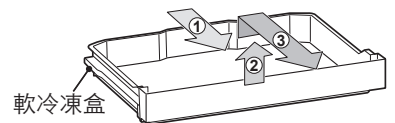

### 請注意：

- 請勿試圖強行除去冷凍室內的結霜。請勿使用尖刀或銳利金屬物體除去結霜。
- 如結霜厚度超過除霜指示器，切勿將軟冷凍盒內的已除霜的水灑出。
- 切勿在冷凍室有冷凍食物存放時除霜。否則食物會融化。  
將食物從冷凍室於軟冷凍盒中取出後方可執行除霜。

# 食品的儲存

冷藏可降低食物腐敗速度。確保食物品質最新鮮，以最大限度地延長易腐食物的儲存壽命。下面為延長食品保存期限的簡要介紹，可供您參考。

## 水果／蔬菜

為盡量減少水份的流失，水果和蔬菜要用保鮮紙及袋子（不封口）之類的塑膠袋輕輕包上，並將其放入蔬菜保鮮室內。

## 乳製品和雞蛋

- 幾乎所有乳製品的外包裝上都標有適當的保存溫度和保存期限。
- 請用箱內的蛋架保存雞蛋。

## 肉類／魚／禽肉

- 請將其放在容器上，並包上保鮮膜。
- 若是大塊的肉、魚和禽肉，請將其放在盤架的內側。
- 已經煮熟的食品務須用保鮮膜包好，或將其放在密封容器內。

## 軟冷凍盒

這適合在無結冰的環境下儲存食物。

此時食物很容易切開。

如食物過硬而無法切開，將其靜置於砧板五至十五分鐘，然後再試。

請注意這一區間並非為長期存放冷凍食物而設計。已存入食物須於一週以內食用完。

## 讓冷凍室達至最佳冷凍效果

- 食物品質應保持新鮮。
- 若要快速冷凍食品，每次都必須少量放入。
- 食品應進行恰當密封，要封緊或蓋緊。
- 將食品均勻地放入冷凍室。
- 袋子和容器上要標上標示，並寫清楚冷凍食品的內容。

## 防止冰箱內部結水珠或結霜的建議

- 請妥善關好冰箱門。如果冰箱內的食品掉落，可能會導致冰箱櫃體和門之間形成縫隙。請將食品放回冰箱內的盤架或冰箱盒。
- 水分高的食物應置入密閉容器內或密封。

## 請注意

- 請妥善關好冰箱門。

# 保養

## 重要提示

為防止內部表面及塑膠元件出現裂痕，請遵循這幾項提示：

- 食用油沾上塑料部件時，請將之擦掉。
- 某些家用化學洗滌劑可能會導致冰箱損傷，因而只能使用稀釋過的廚房用洗滌劑（肥皂水）。
- 如果使用未稀釋的洗劑或者未徹底擦淨肥皂水，則有可能損壞冰箱的塑料部件。

## 清潔

- 拆下冰箱櫃體或門上的附件，如盤架。用溫水和廚房用洗滌劑清洗。然後，用水洗清並使之乾透。
- 冰箱內部要用浸泡在廚房用洗滌劑的溫水裡的布塊擦洗。然後，用冷水將肥皂水徹底擦乾淨。
- 冰箱的外殼沾上污漬時，請用柔軟的布塊擦洗。
- 磁門封條要用廚房用洗滌劑的溫水和牙刷洗淨。

## 請注意

- 請勿使用強力清潔劑或溶劑（油漆、塗料、拋光粉、汽油、沸水等），否則可能導致冰箱損傷。
- 一旦拔出電源插頭，請等待至少5分鐘之後再重新接通電源。
- 在冰箱內請勿使物體掉落，或用物體強烈碰撞內壁。否則可能導致內壁破裂。

## 當冷藏室內燈損壞時

請聯繫SHARP認可的售後服務中心更換內燈。非專業服務人員不得更換內燈。

## 切斷冰箱的電源時

如果冰箱需要長時間關閉，則應採取以下步驟以減少黴菌生長

1. 取出所有食物，然後執行除霜操作。
2. 從插座處拔除電源插頭。
3. 徹底清潔並乾燥內部區域。
4. 保持冰箱門稍微開放幾天進行乾燥。

# 送修之前的初步檢查

送修之前，請對下列地方進行檢查。

問題	對策
冰箱外箱有時會變熱。	這並非異常。櫃內的熱管以防產生露水。
冰箱有噪音時。	冰箱發出以下幾種聲音乃屬正常現象。 <ul style="list-style-type: none"><li>• 運轉開始時，壓縮機發出較大的噪音 --- 不久聲音會變小。</li><li>• 液體流動的聲音（咕嚕聲、嘶嘶聲） --- 冷卻劑在管道中流動造成的（聲音可能會偶爾變得更響亮）。</li><li>• 劈啪聲或吱嘎聲，吱吱聲 --- 在冷卻過程中內壁和內部零件的膨脹與構造造成的。</li></ul>
冰箱內部和冰箱外側結霜或結露。	在下列情形下有可能發生這種現象。請用濕布擦掉霜，用乾布擦掉露珠。 <ul style="list-style-type: none"><li>• 周圍溫度較高時。</li><li>• 頻繁開啟冰箱門時。</li><li>• 冰箱內存放水分較多的食品時。（請用保鮮膜包上）</li></ul>
冷藏室的食品結凍。	<ul style="list-style-type: none"><li>• 是否長期冷藏室溫度控制旋鈕為 MAX 的狀態下使用冰箱？ --- 將溫度調節設定改為其他設定。</li><li>• 在環境溫度較低時，即使將溫度控制旋鈕到 MIN，食品有時也會被凍結。</li></ul>
冰箱內部有異味。	<ul style="list-style-type: none"><li>• 請將氣味較強的食品用保鮮紙包起來。</li></ul>

經檢查後仍需要送修時

請與就近的SHARP認可的售後服務中心洽詢。





**SHARP**  
SHARP CORPORATION