

SHARP®



HIGH SPEED BLENDER
高速搅拌机

EM-F2056

Please read these instructions carefully before operating the appliance.

在操作此搅拌机之前，请仔细阅读本手册中的说明。

OPERATION MANUAL
操作手册

Contents

3 *page*

Important Safety Instructions

8 *page*

Using Your Appliance

5 *page*

Know Your Blender

12 *page*

Cleaning and Maintenance

7 *page*

Before the First Use

12 *page*

Environment Friendly Disposal

目录

15

重要安全说明

20

搅拌机使用说明

17

了解您的搅拌机

23

清理和维护

19

首次使用前的注意事项

23

环保处置

Important Safety Instructions

 
Before using the appliance, please read and follow all the basic safety instructions, including the following:

- Before using, check that the voltage of the product rating and ensure it coincides with your mains voltage.
- Do not let cord hang over the edge of table or counter.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not operate the appliance with a damaged or malfunctioned cord or plug. Return the appliance to the nearest authorized service agent for examination or repair, when there is any indication of damage.
- Do not replace any parts of the appliance with the spare parts other than the appliance genuine parts. The use of any parts of the appliance not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Avoiding contact with any moving parts as serious injury may occur.
- Do not leave foreign objects, such as spoons, forks, knives or the measuring cup, in the jug as this will damage the blades and other components when starting the machine and may cause injury.
- Blades are sharp. Handle carefully.
- The use of attachment, including jug, jug lid, not recommended or sold by manufacturer may cause fire, electric shock or injury.
- The jug should not be more than 2/3 full when the tamper is left in while blending. Do not exceed 30 seconds of continuous blending with the tamper in place.
- When making nut butters or oil based foods, do not process for more than one minute after the mixture starts circulating. Over-processing can cause dangerous overheating.
- When blending hot liquids or ingredients, use caution: spray or escaping steam may cause scalding and burns. Do not fill container to the maximum capacity. Always begin processing on the lowest speed setting. Keep hands and other exposed skin away from the lid opening to prevent possible burns.
- Turn all controls to OFF and unplug the blender when it is not in use, before installing or removing parts, and before cleaning.
- This is an attended appliance. Do not leave the appliance unattended during use.
- Always disconnect the appliance from the power supply if it is left unattended and before assembling, disassembling or cleaning.

- To protect against risk of electrical shock do not put motor unit or power cord in water or other liquid.
- Keep hands and utensils out of jug while blending to reduce the risk of severe injury to persons or damage to the blender.
- If scraping is necessary, turn the power OFF, unplug from the electrical outlet, and use a rubber spatula only.
- Always operate blender with lid in place.
- Never put non-food items into the jug to blend.
- Do not open the lid before the blade stops running completely to avoid hazard.
- Do not put hands or other objects into jug during working.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by the person who is responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

**SAVE THIS INSTRUCTION
THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY**


Know Your Blender

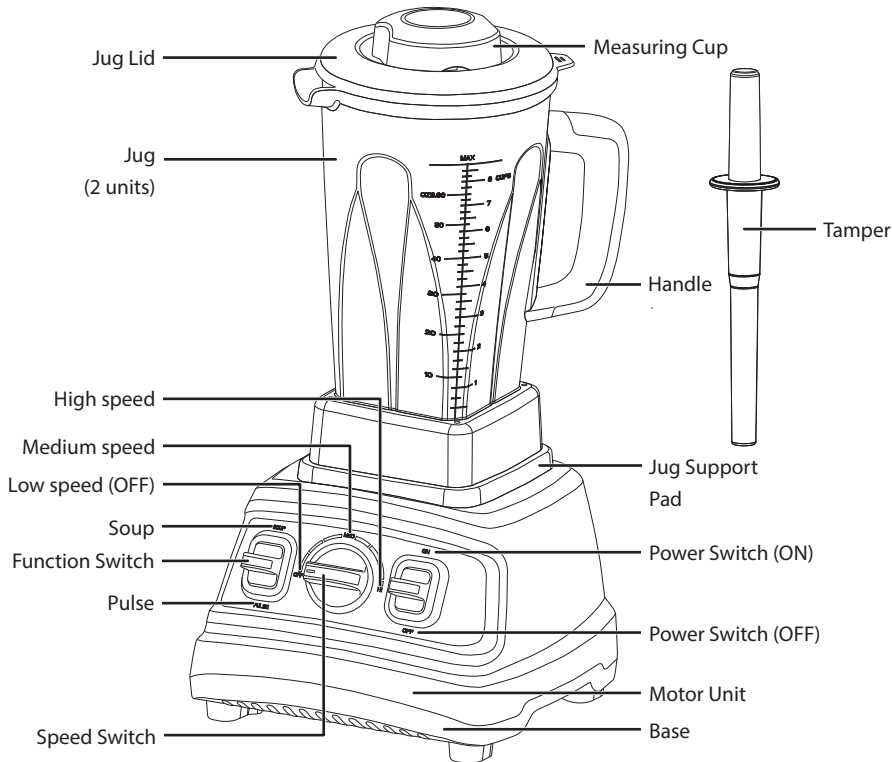

Function switch	With "Soup" and "Pulse" for selection.
Speed Switch	Turn the Switch to choose from manual speed settings from "Low" to "High". Once you select a speed, the blender will run until you turn it back to "OFF".
Tamper	The Tamper allows you to accelerate the process of very thick and/or frozen mixtures that cannot be processed in a regular blender. If food is not circulating, the machine may be overloaded or may have a trapped air bubble. Using the Tamper helps to maintain circulation by preventing air pockets from forming. Turn off the appliance to make it stop working, and then remove the Measuring Cup, and through the hole in the Lid insert the Tamper and use it to press ingredients into the blades as you make frozen ice creams, nut butters, etc.

Product Specification

Model name	EM-F2056
Power supply	220-240V ~ 50/60Hz
Power consumption	1500W
Reset button	Yes
Capacity	2.0L
Cutting blades	6 stainless steel blades
Product Dimension	240*210*490

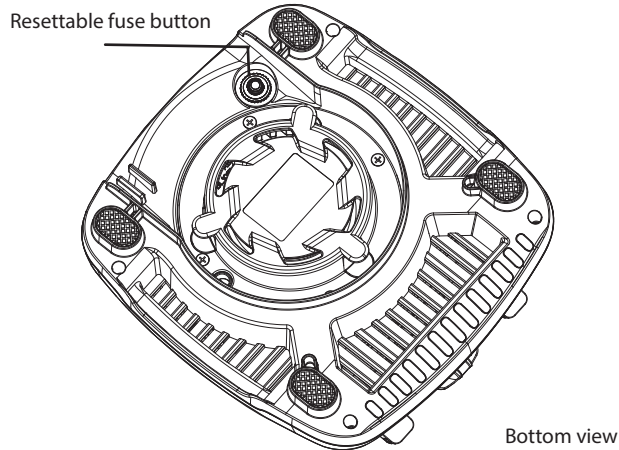 

Resettable fuse button

Incorporated to protect the motor from overheating. If the motor shuts off while in use, turn controls to "OFF" and unplug from the wall outlet. Remove the Jug from the Motor Unit and free the blade of any obstructions. Wait 30 minutes for the unit to cool down. Press external resettable fuse button on the bottom of the Motor Unit.

Note:

- "Function Switch" is interlock with "Speed Switch", that is to say, when operate "Function Switch", "Speed Switch" is invalid; and when operate "Speed Switch", "Function Switch" is invalid.
- Turn off the appliance to make it stop working when the Tamper is used during blending.
- The Jug shall not be more than 2/3 full when the Tamper is used during blending.
- Do not use Tamper for more than 30 consecutive seconds (to avoid stressing the motor).
- You may need to move the Tamper not only up and down, but also side to side.

Before the First Use

- 1** Unpack the appliance and place all parts on a flat surface.
- 2** Immerse the Jug, Jug lid, Measuring Cup and Tamper in soapy water and rinse them and dry. Never immerse Motor Unit in water for cleaning to prevent the risk of electric shock.
CAUTION: The blade is very sharp, handle with care.
- 3** For attaching Jug, place the Jug lid and Measuring Cup into the Jug, ensure the Jug lid and Measuring Cup are placed tightly and properly with the Jug. And then place the Jug onto the Jug Support Pad and fix it onto the Motor Unit tightly. Now, the Blender is ready for use.

Note:

- *Before assembling the Jug, be sure the power cord is unplugged from the power outlet, the Power Switch and the Speed Switch are both on the "OFF" positions.*
- *The appliance will not operate if the Jug is not assembled onto the Motor Unit properly.*
- *Make sure all the parts are assembled properly.*

Using Your Appliance

BLEND

- 1 Lay the appliance on the flat horizontal surface and make sure it is unplugged.
- 2 Prepare the ingredients and cut them into cubes with a size of 15 mm x 15 mm x 15 mm. And then remove the Measuring cup and Jug lid, after it, put the ingredients into the Jug. Usually a certain amount of purified water has to be added to facilitate the smooth running of appliance. The proportion of the ingredients and water is 2:3. The amount of mixture should not exceed the max level as indicated on the Jug. And then close the Jug lid and Measuring Cup well in position.
- 3 Connect the appliance with power source, and then push the Power Switch to "ON" position.
- 4 Turn the Speed Switch to the "HI" speed setting and the appliance starts to blend the ingredients.
- 5 After blending for about 30 seconds, turn the Speed Switch to "OFF" position, and the appliance stops working.
- 6 You may add ingredients into the Jug through the center opening of Jug cover during operation. Turn off the appliance to make it stop working, and then remove the Measuring Cup and add the ingredients into the Jug through the center opening of Jug. Then replace the Measuring Cup in position and turn on the appliance again.
Note:
 - *During operation, if the mixture is too thick to be blended, operate by referring to the description of "Tamper" mentioned above.*
 - *Do not remove the Jug from the Motor Unit during working process. If it is necessary to remove the Jug, please turn off the appliance to make it stop working and then remove it.*
 - *The advisable operation time per time is 3 minutes and minimum 1 minute rest time must be maintained between two consecutive cycles. Allow the appliance to rest for at least 30 minutes every 10 cycles.*
- 7 After finish blending, move the Jug out of the Jug Support Pad, and then carefully take down the Measuring Cup and Jug Lid, then pour and serve.
CAUTION: *The Speed Switch and Power Switch must be at "OFF" positions and the power outlet must be unplugged before removing the Jug.*

CRUSH ICE

- 1 Lay the appliance on the flat horizontal surface and make sure it is unplugged.
- 2 Prepare some ice cubes with a size of 15 mm x 15 mm x 15 mm. And then remove the Measuring cup and Jug lid, after it, put the ice cubes into the Jug. Usually certain amount of purified water has to be added to facilitate the smooth running of appliance. The proportion of the ice and water is 2:3. The amount of mixture should not exceed the max level as indicated on the Jug. And then close the Jug Lid and Measuring Cup well in position.
- 3 Connect the appliance with power source, and then push the Power Switch to "ON" position.
- 4 Turn the speed Switch to the "HI" speed setting or push the function switch to "Pulse" setting and the appliance starts to crush ice.
- 5 After crushing ice for around 3 minutes, turn the speed Switch to "OFF" position, and the appliance stops working.
- 6 You may add ingredients into the Jug through the center opening of Jug cover during operation. Turn off the appliance to make it stop working, and then remove the Measuring Cup and add the ingredients into the Jug through the center opening of Jug. Then replace the Measuring Cup in position and turn on the appliance again.

Note:

- *During operation, if the mixture is too thick to be crushed, operate by referring to the description of "Tamper" mentioned above.*
 - *Do not remove the Jug from the Motor Unit during working process. If it is necessary to remove the Jug, please turn off the appliance to make it stop working and then remove it.*
 - *The advisable operation time per time is 3 minutes and minimum 1 minute rest time must be maintained between two consecutive cycles. Allow the appliance to rest for at least 30 minutes every 10 cycles.*
- 7 After finish working, move the Jug out of the Jug Support Pad, and then carefully take down the Measuring Cup and Jug Lid, then pour and serve.
- CAUTION:** *The Speed Switch and Power Switch must be at "OFF" positions and the power outlet must be unplugged before removing the Jug.*

GRIND

- 1 Lay the appliance on the flat horizontal surface and make sure it is unplugged.
- 2 Prepare 200 g roasted coffee beans, and then remove the Measuring Cup and Jug Lid and put the roasted coffee beans into the Jug, after it, close the Jug Lid and Measuring cup well in position.

Note: *The maximum capacity of food to be grinded must not exceed 200 g.*

- 3 Connect the appliance with power source, and then push the Power switch to "ON" position.
- 4 Push the function switch to "Pulse" setting and the appliance starts to grind coffee beans.
- 5 After grinding for about 30 seconds, turn the Speed Switch to "OFF" position, and the appliance stops working.

Note:

- *During operation, if the coffee powder is too thick to be grinded, operate by referring to the description of "Tamper" mentioned above.*
- *Do not remove the Jug from the Motor Unit during working process. If it is necessary to remove the Jug, please firstly turn off the appliance to make it stop working and then remove it.*
- *The advisable operation time per time is 3 minutes and minimum 1 minute rest time must be maintained between two consecutive cycles. Allow the appliance to rest for at least 30 minutes every 10 cycles.*

- 6 After finish working, move the Jug out of the Jug Support Pad, and then carefully take down the Measuring Cup and Jug Lid, then pour and serve.

CAUTION: *The Speed Switch and Power Switch must be at "OFF" positions and the power outlet must be unplugged before removing the Jug.*

MAKE HOT SOUP

- 1 Lay the appliance on the flat horizontal surface and make sure it is unplugged.
- 2 Remove the Measuring Cup and Jug Lid, and then put the required ingredients into the Jug and fill the Jug with appropriate amount of room-temperature purified water. The amount of mixture should not exceed 1000 ml. And then close the Jug Lid and Measuring Cup well in position.
- 3 Connect the appliance with power source, and then push the Power switch to "ON" position.
- 4 Push the function switch to "Soup" setting and the appliance starts to make soup.
NOTE: *The machine runs slowly at the first 15 seconds and will accelerate when detecting food.*
- 5 After cooking for about 6 minutes, the Switch will turned off automatically.

Note:

- *During operation, if the soup is too thick and hard to be processed, operate by referring to the description of "Tamper" mentioned above.*
- *Do not remove the Jug from the Motor Unit during working process. If it is necessary to remove the Jug, please turn off the appliance to make it stop working and then remove it.*
- *The advisable operation time per time is 6 minutes and minimum 5 minutes rest time must be maintained between two consecutive cycles. Allow the appliance to rest for at least 30 minutes every 10 cycles.*

- 6** After finish working, move the Jug out of the Jug Support Pad, and then carefully take down the Measuring Cup and Jug Lid, then pour and serve.

CAUTION: *The Speed Switch and Power Switch must be at "OFF" positions and the power outlet must be unplugged before removing the Jug.*

 
Cleaning and Maintenance

- After use, reassemble the Jug and pour about 400 - 500 ml water into it and turn the Speed Switch to “HI” speed or push the function switch to “Pulse” position to work for a few seconds to remove the residual food.
- After stop, remove the Jug from the Motor Unit and rinse the Jug under running water.
- Wiping the outer surface of Motor Unit with a damp cloth, do not use abrasive cleansers. Never immerse in water or other solution for cleaning.
- All parts except the Motor Unit are dishwasher-safe. You can also wash the parts, except the Motor Unit, in warm, soapy water.
- Dry all parts and then reassemble them again. But store the appliance with the Jug Lid not be closed completely to allow air to circulate and prevent Jug odors.
- If any problem has been encountered during use, never disassemble the Motor unit by yourself, there are no user serviceable parts inside. Contact only the authorized SHARP service centre for examination and repair.

WARNING:

- *The blade is very sharp, handle carefully when clean.*
- *Do not use abrasive cleaners. Never immerse the Motor Unit in water for cleaning*

Environment Friendly Disposal

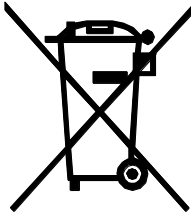

You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.



重要安全说明

 
在使用此搅拌机之前，请阅读并遵守所有基本的安全说明，包括：

- 在使用之前，检查产品的额定电压，确保它与您的电源电压一致。
- 请勿将电源线悬挂在桌子或柜子边缘。
- 请勿放在烧热的燃气炉或电炉上或其附近，或者放在加热的烤箱内。
- 请勿在此搅拌机上使用损坏或故障的电线或插头。如果存在任何损坏的迹象，请将此搅拌机送往最近的授权维修代理处进行检查或修理。
- 请勿使用非标准件替换本搅拌机的任何部件。使用非建议部件或非制造商销售的部件可能会造成火灾、触电或人身伤害。
- 请勿接触任何运转部件，因为这可能会造成严重伤害。
- 请勿将勺子、叉子、刀具或量杯等异物留在搅拌壶中，因为启动机器后，这将损坏刀片及其他组件，可能会导致受伤。
- 搅拌机刀片非常锋利，因此操作时请小心。
- 使用未由制造商建议或出售的配件，包括搅拌壶、壶盖，可能会引起火灾、电击或受伤。
- 搅拌时，如果将搅拌棒留在容器内，则搅拌壶内的食物不应超过 2/3。如果放置搅拌棒，则连续搅拌时间请勿超过 30 秒。
- 制作坚果酱或油性食物时，当混合物开始流动后，处理时间请勿超过一分钟。过度处理可引起过热，十分危险。
- 搅拌滚烫的液体或食材时，请小心谨慎：喷雾或溢出的蒸汽可能会导致烫伤和灼伤。请勿将食材装至容器最大容量。始终以最低速度设置开始处理。保持双手及其他裸露肌肤远离壶盖开口，以防止可能发生的灼伤。
- 不使用时，请将所有控件转至关闭，并拔掉搅拌机的插头，然后装上或取下部件，再进行清洁。
- 这是一个需要人看管的设备。在使用过程中，请勿使设备处于无人看管状态。
- 如果无人看管，在组装、拆卸或清洁之前，始终切断设备与电源的连接。
- 要防止电击的风险，请勿将电机装置或电源线放在水中或其他液体中。
- 搅拌时，请保持双手和器具远离搅拌壶，以减少对人体造成严重伤害或对搅拌机造成严重损坏的风险。
- 如果需要刮擦，请关闭电源，从电源插座上拔掉插头，只能使用橡胶刮刀。
- 在操作搅拌机时，始终盖好盖子。
- 请勿将非食物类物品放在搅拌壶内进行搅拌。
- 在刀片完全停止运转之前，请勿打开盖子，以避免危险。
- 工作时，请勿将手或其他物体放入搅拌壶内。

- 对于生理、感官或精神能力有缺陷或者缺乏经验和知识的使用者，如果提供有关以安全方式使用设备的监督或指示，且如果他们了解所涉及的危险，则可以使用该设备。
- 应监督儿童，以确保其不会玩弄设备。

保留这些说明。
此搅拌机仅供家用。

了解您的搅拌机

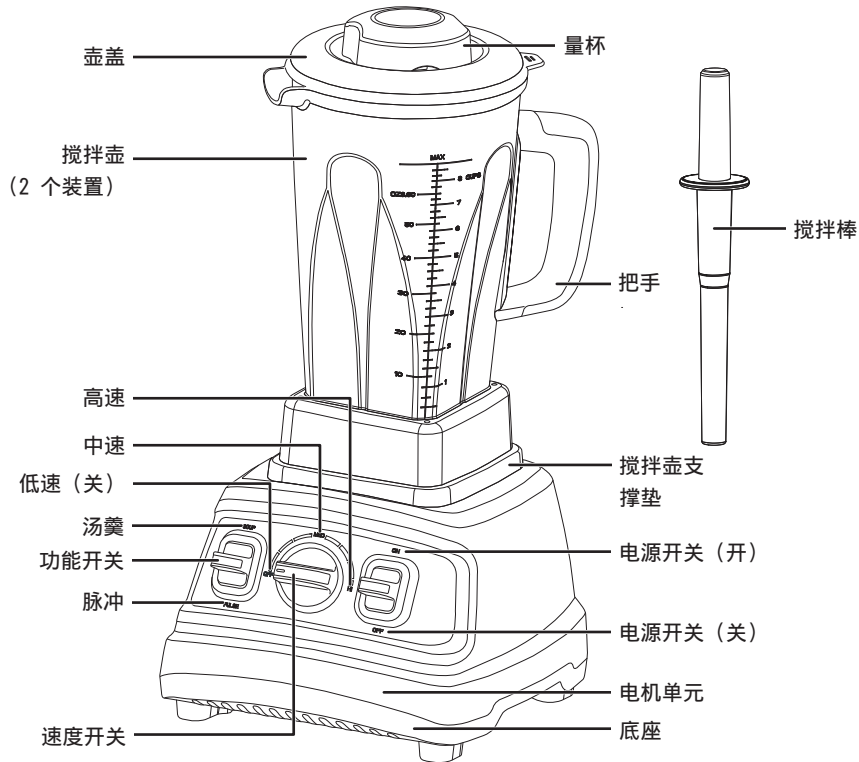


功能开关	选择“汤羹”或“脉冲”。
速度开关	转动开关，从“低”到“高”，选择手动速度设置。选择好一个速度后，搅拌机将运转，直到您将其转回“关”。
搅拌棒	借助搅拌棒，您可以加快普通搅拌机中无法处理的粘稠和/或冷冻混合物的过程。如果食物不流动，则机器可能负载过重，或者中间可能有气泡。使用搅拌棒可防止形成气泡，从而有助于保持流动。如果您制作冷冻冰淇淋、坚果酱等，关闭设备，使其停止工作，然后移除量杯，通过盖子上的孔插入搅拌棒，用其将食材按压到刀片中。

产品规格

型号名称	EM-F2056
电源	220-240V ~ 50/60Hz
能耗	1500W
重置按钮	是
容量	2.0L
切割刀片	6 个不锈钢刀片
产品尺寸	240*210*490

 自复位保险丝按钮

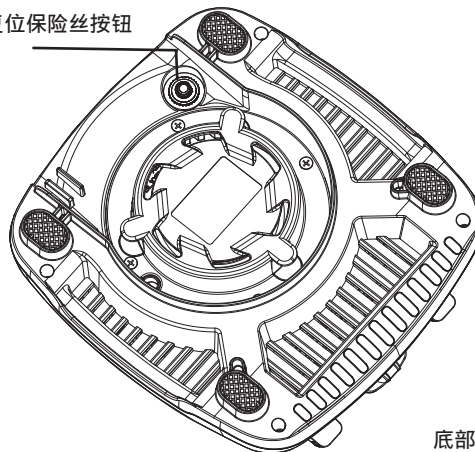

底部视图

自复位保险丝按钮	提供该按钮，以保护电机避免过热。如果在使用时电机关闭，将控件转至“关”，从壁式插座拔掉插头。从电机装置中取下搅拌壶，清除刀片上的任何障碍物。等待30分钟，待装置冷却。按下电机装置底部的外部自复位保险丝按钮。
----------	---

注：

- “功能开关”与“速度开关”互锁，也就是说，操作“功能开关”时，“速度开关”无效；操作“速度开关”时，“功能开关”无效。
- 在搅拌过程中使用搅拌棒时，请关闭设备，以使其停止工作。
- 在搅拌过程中使用搅拌棒时，搅拌壶内的食物不应超过2/3。
- 请勿连续使用搅拌棒超过30秒（以避免对电机施加压力）。
- 除了上下活动，您可能需要左右活动搅拌棒。

首次使用前的注意事项

- 1** 从包装中取出设备，将所有部件放在平坦表面上。
- 2** 将搅拌壶、壶盖、量杯和搅拌棒浸入肥皂水中，冲洗并烘干。切勿将电机装置浸入水中进行清洗，以防止电击风险。
小心：搅拌机刀片非常锋利，因此操作时请小心。
- 3** 要安装搅拌壶，将壶盖和量杯放入搅拌壶中，确保壶盖和量杯放在搅拌壶的适当位置且紧密固定。然后将搅拌壶放在搅拌壶支撑垫上，并牢固地安装在电机装置上。现在，搅拌机准备就绪，可以使用。

注：

- 组装搅拌壶之前，确保电源线未插入电源插座，电源开关和速度开关均处于“关”位置。
- 如果搅拌壶未正确组装到电机装置上，则设备将不操作。
- 确保所有部件均正确组装。

搅拌机使用说明

搅拌

- 1 将设备放在平坦的水平表面上，确保其未插电。
- 2 准备食材，将其切成 15mm x 15mm x 15mm 的小方块。然后移除量杯和壶盖，之后，将食材放入搅拌壶中。通常需要添加一定量的纯净水，以促进设备的平稳运转。食材和水的比例是 2:3。混合物的数量不应超过搅拌壶上标注的最大液位。然后将壶盖和量杯盖好。
- 3 连接设备与电源，然后将电源开关推到“开”位置。
- 4 将速度开关转至“高”速设置，设备开始搅拌食材。
- 5 搅拌大约 30 秒后，将速度开关转至“关”位置，设备停止工作。
- 6 操作过程中，您可以通过壶盖中间的开口在搅拌壶中添加食材。关闭设备，使其停止工作，然后移除量杯，通过搅拌壶中间的开口，将食材添加到搅拌壶中。然后将量杯放置到位，再次打开设备。

注：

- 操作过程中，如果混合物太浓稠而无法搅拌，则参考上述“搅拌棒”说明进行操作。
- 工作过程中，请勿从电机装置中取下搅拌壶。如果需要取下搅拌壶，请关闭设备，使其停止工作，然后将其取下。
- 每次的合理操作时间是 3 分钟，两次连续循环之间必须确保至少 1 分钟的休息时间。每 10 个循环，允许设备休息至少 30 分钟。

- 7 完成搅拌后，从搅拌壶支撑垫中取下搅拌壶，然后小心取下量杯和壶盖，倒出并享用。

小心：速度开关和电源开关必须处于“关”位置，在取下搅拌壶之前，必须从电源插座拔掉插头。

碎冰

- 1 将设备放在平坦的水平表面上，确保其未插电。
- 2 准备一些 15mm x 15mm x 15mm 的冰块。然后移除量杯和壶盖，之后，将冰块放入搅拌壶中。通常需要添加一定量的纯净水，以促进设备的平稳运转。冰块和水的比例是 2:3。混合物的数量不应超过搅拌壶上标注的最大液位。然后将壶盖和量杯盖好。
- 3 连接设备与电源，然后将电源开关推到“开”位置。
- 4 将速度开关转至“高”速设置，或将功能开关推至“脉冲”设置，设备开始碎冰。
- 5 碎冰 3 分钟后，将速度开关转至“关”位置，设备停止工作。



- 6** 操作过程中，您可以通过壶盖中间的开口在搅拌壶中添加食材。关闭设备，使其停止工作，然后移除量杯，通过搅拌壶中间的开口，将食材添加到搅拌壶中。然后将量杯放置到位，再次打开设备。

注：

- 操作过程中，如果混合物太浓稠而无法搅拌，则参考上述“搅拌棒”说明进行操作。
- 工作过程中，请勿从电机装置中取下搅拌壶。如果需要取下搅拌壶，请关闭设备，使其停止工作，然后将其取下。
- 每次的合理操作时间是3分钟，两次连续循环之间必须确保至少1分钟的休息时间。每10个循环，允许设备休息至少30分钟。

- 7** 完成搅拌后，从搅拌壶支撑垫中取下搅拌壶，然后小心取下量杯和壶盖，倒出并享用。

小心：速度开关和电源开关必须处于“关”位置，在取下搅拌壶之前，必须从电源插座拔掉插头。

研磨

- 1** 将设备放在平坦的水平表面上，确保其未插电。
- 2** 准备200g的烘焙咖啡豆，然后移除量杯和壶盖，将烘焙咖啡豆放入搅拌壶内，之后，将壶盖和量杯盖好。

注意：待研磨食物的最大容量不超过200g。

- 3** 连接设备与电源，然后将电源开关推到“开”位置。
- 4** 将功能开关推至“脉冲”设置，设备开始研磨咖啡豆。
- 5** 研磨大约30秒后，将速度开关转至“关”位置，设备停止工作。

注：

- 操作过程中，如果混合物太浓稠而无法搅拌，则参考上述“搅拌棒”说明进行操作。
- 工作过程中，请勿从电机装置中取下搅拌壶。如果需要取下搅拌壶，请关闭设备，使其停止工作，然后将其取下。
- 每次的合理操作时间是3分钟，两次连续循环之间必须确保至少1分钟的休息时间。每10个循环，允许设备休息至少30分钟。

- 6** 完成搅拌后，从搅拌壶支撑垫中取下搅拌壶，然后小心取下量杯和壶盖，倒出并享用。

小心：速度开关和电源开关必须处于“关”位置，在取下搅拌壶之前，必须从电源插座拔掉插头。

烹制热汤

- 1 将设备放在平坦的水平表面上，确保其未插电。
- 2 移除量杯和壶盖，然后将所需食材放入搅拌壶，在搅拌壶内注入适量室温纯净水。混合物的容量不应超过 1000ml。然后，将壶盖和量杯盖好。
- 3 连接设备与电源，然后将电源开关推到“开”位置。
- 4 将功能开关推至“汤羹”设置，设备开始做汤。
注意：在前 15 秒，机器缓慢运转，检测到食物后加速。
- 5 烹制大约 6 分钟后，开关自动关闭。
注：
 - 操作过程中，如果汤太浓稠而难以处理，则参考上述“搅拌棒”说明进行操作。
 - 工作过程中，请勿从电机装置中取下搅拌壶。如果需要取下搅拌壶，请关闭设备，使其停止工作，然后将其取下。
 - 每次的合理操作时间是 6 分钟，两次连续循环之间必须确保至少 5 分钟的休息时间。每 10 个循环，允许设备休息至少 30 分钟。
- 6 工作完成后，从搅拌壶支撑垫中取下搅拌壶，然后小心取下量杯和壶盖，然后倒出并享用。
小心：速度开关和电源开关必须处于“关”位置，在取下搅拌壶之前，必须从电源插座拔掉插头。

 
清理和维护

- 使用后，重新组装搅拌壶，在其中倒入大约 400-500ml 的热水，将速度开关转至“高”速或将功能开关推至“脉冲”位置，待其工作几分钟，以清除残余食物。
- 停止后，将搅拌壶从电机装置中取下，在流动的水下冲洗搅拌壶。
- 用湿布擦拭电机装置的外表面，请勿使用具有研磨作用的清洁剂。切勿浸入水或其他溶液中进行清洗。
- 除电机装置以外的所有部件均可在洗碗机中清洗。您也可以在温热的肥皂水中清洗除电机装置以外的部件。
- 擦干所有部件，然后再次重新组装。但在存储设备时，不要将壶盖完全闭合，让空气能够流动，防止搅拌壶有异味。
- 如果在使用过程中遇到任何问题，切勿自行拆卸电机装置，里面没有用户可维修的部件。仅应联系授权夏普维修中心进行检查和维修。

警告：

- 刀片非常锋利，清洗时请小心处理。
- 请勿使用具有研磨作用的清洁剂。切勿将电机装置浸入水中进行清洗。

环保处置

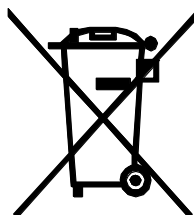

您可以为保护环境做出一份贡献！

请记住要遵守当地法规：将不能运行的电气设备交给适当的废物处理中心进行处置。

SHARP®

SHARP CORPORATION